

# COTTON CANDY MACHINE INSTRUCTIONS

## Electrical Requirements

- Maximum amp draw at 120 volts is 9 amps (this figure is approximation and may vary slightly. An overloaded circuit will not allow machine to make cotton candy)
- The power supply cord is equipped with a machine ground. For safety, always plug machine into a grounded receptacle

## Operating

1. Double check that the two transport screws on the unit on either side of the floss head are unscrewed. DO NOT run the machine with these screws in the “up” position
2. Make sure plastic netting is clipped to the inside of the bowl.
3. Fill the floss head with sugar. DO NOT let the sugar mound up over the lip.
4. Turn on both the heat and motor switches and position heat dial to the “2 o’clock” position
5. Take a cone and hold it an inch or two above the pointed end. With a light flicking action, roll cone in the web of floss building up in the bowl.
6. Lift up the cone with the floss attached and rotate to wrap the floss. DO NOT roll the floss while the cone is in the bowl – this will pack the floss too tightly.

## Shut Down Procedure

1. When completing operation (or for any prolonged period), run all sugar out of the floss head.
2. When empty, turn the heat to the high position for approximately one minute to “clean” the band by baking off the remaining sugar. NEVER put water in the floss head.

3. Clean the bowl and bubble with water. The sugar should easily dissolve after a few minutes. Wipe dry.
4. Wipe the outside of machine with a wet cloth to dissolve any sugar that may have collected on it. Wipe dry.