

## **Inflatable Set-Up Instructions**

- 1) Check ground for a flat level surface free of anything could damage the inflatable unit. Also, check height clearance for trees, power lines, or overhead obstructions.
- 2) Remove inflatable from bag. Remove stray and unroll the inflatable in the direction you wish the Inflatable to face.
- 3) Unfold and securely attach the blower(s) to the inflation tube. The inflation tube is generally located in the back or on the side(s) of the inflatable.
- 4) Close zipper and secure velcro flap to cover zipper (located near inflation tube).
- 5) Attach heavy duty extension cord from power source (use 14 gauge or heavier extension cord(s) that extends no more than 100 feet from the inflatable to the power source. (The lower the gauge number, the thicker the cord. Most household extension cords are 16 gauge which are not sufficient enough and can harm the blower- reducing the air source to the Inflatable.)
- 6) Turn the power on by using the switch on the blower. While the inflatable inflates- check to make sure no air is escaping vents or ports.
- 7) Check to make sure the inflation tube leading to the blower is not twisted.
- 8) Secure the inflatable by staking the unit at all staking points and tying the tether straps securely around the stakes. If your inflatable unit has tether loops, place loop around hook stake and hammer stake in the ground at a 45 degree angle away from the inflatable.

For any questions please call our office at 215-256-4444.

