

Tent Heater Operating Instructions

To Start the Heater:

1. Turn on Propane tank
 - a) You may smell a little gas as it travels through the regulator to the heater. This is normal.
 - b) If you feel there is a problem call the Bucks Mont Party Rental emergency line @ (215) 345-4556
2. Turn toggle switch (in back of the heater) up to the "heat" position
 - a) The fan will turn on
 - b) If you don't hear the fan turn on check that the electricity is still plugged into the outlet and that the outlet works.
 - c) The heater will ignite after a few seconds and warm air will follow

Set the desired temperature on the thermostat.

Shut Down After Event

****VERY IMPORTANT****

1. Turn the toggle switch to the center "off" position
2. Turn off the propane tank

For any questions or concerns, please call Harleysville Party Rental immediately. If after normal business hours, leave a detailed message and someone will return your call promptly!